





## POSITIVE PRESSURE SYSTEM

To turn your system **ON/OFF**

To turn ON press and hold  for 2 seconds.

To turn OFF press and hold  for 2 seconds.

In standard “positive pressure” mode the unit will now display “*Air ON*”.

Your home will be ventilated with any solar heated air in this mode.

---

To set the **maximum roof space temperature**.

Press and hold the **SET** button until “*Set Roof Max*” is displayed. Arrow up or down to the desired temperature setting and release the button then press **SET** again to store the setting.

The system will stop bringing air into the house at this point and display “*Too Hot*”

This can be set between 19°C and 50°C

---

To set the **minimum roof space temperature**

Press and hold down the **SET** button until “*Set Roof Min*” is displayed. Arrow up or down to the desired temperature setting and release the button then press **SET** again to store the setting. The system will stop bringing air into the house at this point and display “*Too Cold*”.

This can be set between 00°C and 14°C (if 00°C is selected the unit will not shut off at any lower temperature)

---

To turn on **AIR BOOST** (use in times of extreme conditions)

To turn ON press and hold **AIR BOOST** for 2 seconds.

To turn OFF press and hold **AIR BOOST** for 2 seconds.

When Air Boost is selected, the keypad display will alternate between “*AirBoost*” and the systems current mode.