





POSITIVE PRESSURE + HEAT TRANSFER + FRESH AIR SYSTEM

To turn your system **ON/OFF**

To turn ON press and hold  for 2 seconds.

To turn OFF press and hold  for 2 seconds.

In standard “positive pressure” mode the unit will now display “Air ON”.

Your home will be ventilated with any solar heated air in this mode.

To set the **Maximum Roof Space Temperature**.

Press and hold the **SET** button until “Set Roof Max” is displayed. Arrow up or down to the desired temperature setting and release the button then press **SET** again to store the setting. The system will stop bringing air into the house at this point and display “Too Hot”

This can be set between 19°C and 50°C

To set the **Minimum Roof Space Temperature**

Press and hold down the **SET** button until “Set Roof Min” is displayed. Arrow up or down to the desired temperature setting and release the button then press **SET** again to store the setting. The system will stop bringing air into the house at this point and display “Too Cold”.

This can be set between 00°C and 14°C (if 00°C is selected the unit will not shut off at any lower temperature)

To set **Heat Transfer**

Press and hold the **SET** button until “Set Warm Tfr” is displayed. Arrow up or down to the desired temperature setting and release the button then press **SET** again to store the setting. The heat will start to transfer when the temperature at the source rises to this set point.

This will set the temperature that the air valve will change and move air from the Wood heater or Heat pump to the remote parts of the house.

To return to **Auto Warm** (normal mode)

Press and hold **MODE** button until “Autowarm” is displayed.

To turn on **AIR BOOST** (use in times of extreme conditions)

To turn ON press and hold **AIR BOOST** for 2 seconds.

To turn OFF press and hold **AIR BOOST** for 2 seconds.

When Air Boost is selected, the keypad display will alternate between “AirBoost” and the systems current mode.

To select **Fresh Air Mode**

Press and hold **MODE** button until “FreshAir” is displayed.

To set **Fresh Air**

Press and hold the **SET** button until “FreshAirOff” is displayed. Arrow up or down to the desired temperature setting and release the button then press **SET** again to store the setting. The system will change back to positive pressure mode (bringing air from your roof space) when the temperature lowers at this setpoint.
